

BAFANG MIDDLE ENGINE ERROR

MESSAGES

04 Throttle does not return: Check if the throttle has returned to its original position (older LF models)

05 Throttle error: Check the throttle (older LF models)

06 Low voltage protection: Check the battery voltage

07 High voltage protection: Check the battery voltage

08 Motor error: Error: Hall sensors – motor replacement

09 Motor phase cable error: Check the drive unit / motor cable error

10 Controller overheating: Stop riding until the message disappears

11 Temperature sensor fault: Check the controller

12 Temperature sensor fault: Check the controller

13 Battery temperature error: Check the battery / battery temperature sensor error

21 Speed sensor error: Check the speed sensor position or replace the speed sensor

22 BMS communication error: Replace the battery

23 Motor phase cable error: Check the drive unit

24 Display error: Light sensor

25 Pressure sensor error: Check the drive unit

30 Communication error: Check the controller connection

26 Controller error: Pressure sensor – speed – motor replacement

27 Controller error: High current controller

30 Communication error: Output display, motor, or battery – solution by cross-testing individual components

31 Communication error: Output display, motor, or battery – solution by cross-testing individual components

36 Controller or display error

41 Battery error: Voltage is too high

42 Battery error: Voltage is too low

43 Battery error: Battery current is too high

44 Battery error: Cell voltage is too high

45 Battery error: Battery temperature is too high

46 Battery error: Battery temperature is too low

47 Battery error: Battery charging is too high

48 Battery error: Battery charging is too low