

1. Remove the bolt and red cylinder




2. Pull the cable through hole in seatpost and cylinder



3. Pull cable all in and put back the cylinder (grease the cylinder) 4. Secure the cylinder with bolt



5. Pull cable through the bowden

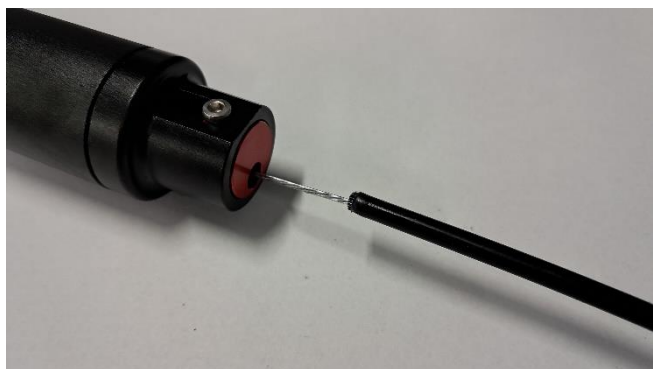

6. Finish. Check the right function.



LEADER FOX